


## Cleaning the Electrostatic Charger

---

If the **Electrostatic Charger** is dirty, linear smudges may appear on a print image. If this occurs, clean the **Electrostatic Charger** according to the following procedure.

**Open the Lower Front Door of the machine.**

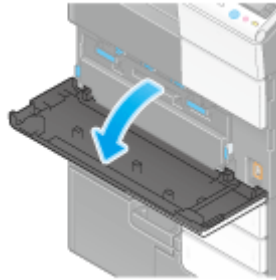

**Carefully pull out the Charger Cleaner towards yourself up to the position at which it stops. Then, carefully press it against the back side.**

Repeat this operation for approximately three times.




**Securely press the Charger Cleaner, and close the Lower Front Door of the machine.**

## Cleaning the Print Head Glass


---

Printing quality deteriorates if the **Print Head Glass** is dirty. If this occurs, clean the **Print Head Glass** according to the following procedure.


**Pull out Tray 2.**

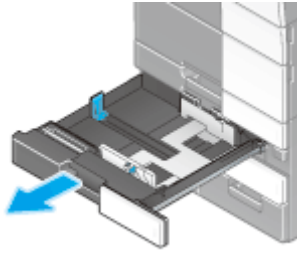


**Remove the Printhead Cleaner from Tray 2.**

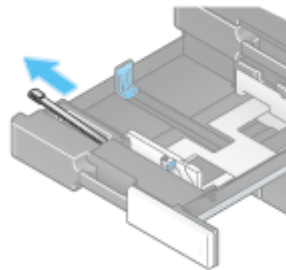

**Open the Lower Front Door of the machine.**

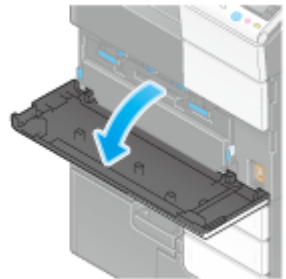


**Release the Waste Toner Box Lock Lever, then remove the Waste Toner Box.**

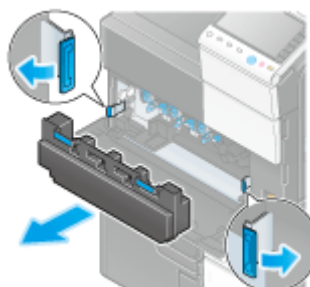

**Slowly insert the Printhead Cleaner all the way to the back end of the Print Head Glass, and then slowly pull it out.**

Repeat this operation approximately three times for all the **Print Head Glass** sections.

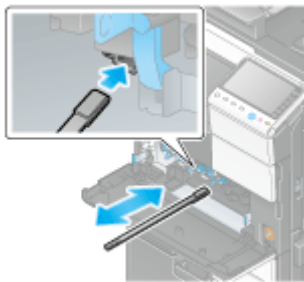

**Install the Waste Toner Box.**

**Close the Lower Front Door of the machine.**

**Place back the Printhead Cleaner to Tray 2.**

**Close Tray 2.**