


Cleaning the Print Head Glass

Printing quality deteriorates if the **Print Head Glass** is dirty. If this occurs, clean the **Print Head Glass** according to the following procedure.


1. Open the Front Door of the machine.

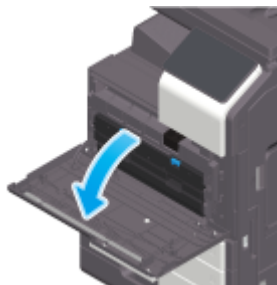

2. Remove the Waste Toner Box.



3. Remove the Printhead Cleaner from the Front Door of this machine.

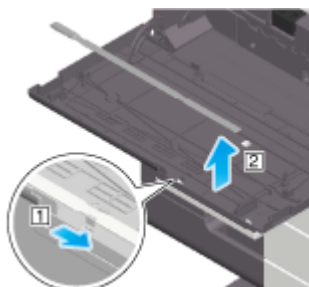

4. Slowly insert the Printhead Cleaner all the way to the back end of the Print Head Glass, and then slowly pull it out.

➡ Repeat this operation for approximately three times.



5. Mount the **Printhead Cleaner** onto the **Front Door** of this machine.
6. Mount the **Waste Toner Box**.
7. Close the **Front Door** of the machine.