


Cleaning the Print Head Glass

Printing quality deteriorates if the **Print Head Glass** is dirty. If this occurs, clean the **Print Head Glass** according to the following procedure.


1. Open the **Lower Front Door** of the machine.



2. Remove the **Waste Toner Box**.

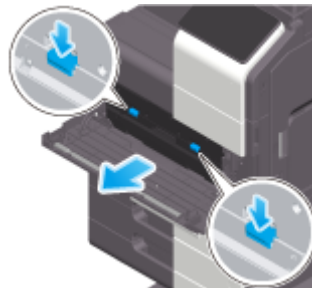


3. Remove the **Printhead Cleaner** from the **Lower Front Door** of this machine.

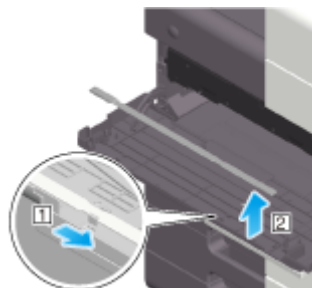

4. Slowly insert the **Printhead Cleaner** all the way to the back end of the **Print Head Glass**, and then slowly pull it out.

➡ Repeat this operation approximately three times for all the **Print Head Glass** sections.

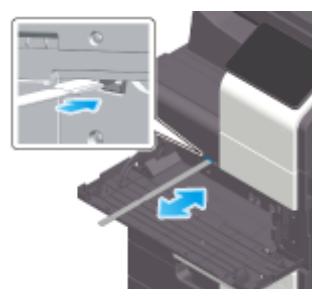

5. **Mount the Printhead Cleaner onto the Lower Front Door of this machine.**
6. **Mount the Waste Toner Box.**
7. **Close the Lower Front Door of the machine.**