

Tips

- ❖ Do not remove staples that remain in the machine. Otherwise, the stapling function will activate but no sheets will be stapled.




NOTICE


- ❖ Be sure to replace the **Staple Cartridge** after the relevant message has appeared. If a **Staple Cartridge** is removed before the relevant message appears, it may result in a failure.

Finisher FS-533


1. Pinch the **Lock Release Lever**, and slide the **Finisher**.

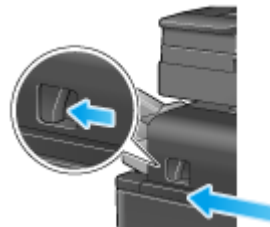


2. Pull the **Punch Kit Release Lever [FS2]** in the arrow direction, and open the **Punch Kit**.

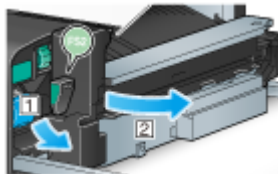


3. Unlock the Staple Cartridge.

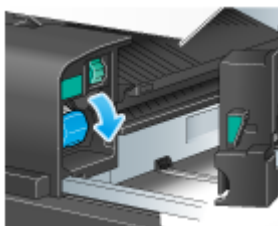


4. Pull out the Staple Cartridge.

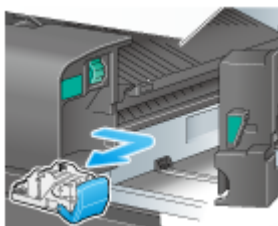


5. Remove any empty staple cases from the Staple Cartridge.

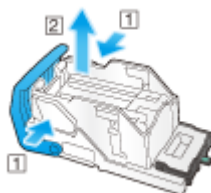


6. Attach a new staple case to the Staple Cartridge.

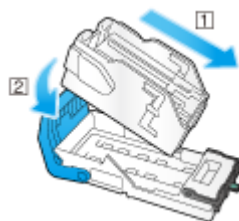

7. Attach the Staple Cartridge.

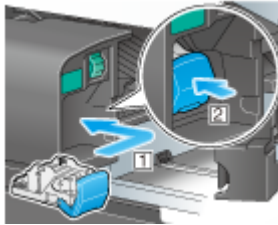

8. Close the **Punch Kit**.

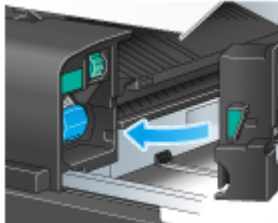

9. Close the **Finisher**.



Tips

- ❖ Do not remove staples that remain in the machine. Otherwise, the stapling function will activate but no sheets will be stapled.



NOTICE

- ❖ Be sure to replace the **Staple Cartridge** after the relevant message has appeared. If a **Staple Cartridge** is removed before the relevant message appears, it may result in a failure.