
9.3 If print quality is deteriorated


Cleaning the Electrostatic Charger Wire

If the **Electrostatic Charger Wire** is dirty, streaks will appear though the printed images. If this occurs, follow the procedure described below to clean the **Electrostatic Charger Wire**.

1 Open the Front Door.

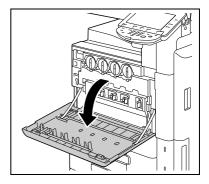

Slowly pull out the Charger Cleaner as far as possible. Next, slowly push in the charger-cleaning tool as far as possible.
Repeat the above operations three times.

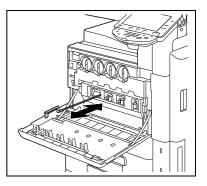


3 Securely insert the **Charger Cleaner**, and then close the **Front Door**.


Cleaning the Printhead

If the **Printhead** becomes dirty, print quality may be reduced. If this occurs, clean the **Printhead** according to the following procedure.


1 Open the Front Door.

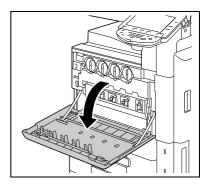

Release the Waste Toner Box Lock Lever, and then remove the Waste Toner Box.

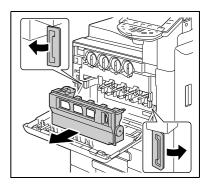

3 Slowly pull out the Printhead Cleaner toward until it stops. Next, slowly push in the charger-cleaning tool as far as possible.
Repeat the above operations three times.

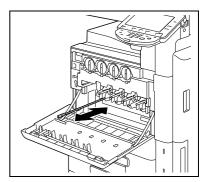

- 4 Securely insert the **Printhead Cleaner**, and install the **Waste Toner Box**.
- 5 Close the Front Door.